



LIST OF PARTS

- | | | | |
|-----------------------------------|---------------------------------|-------------------------------------|-------------------------------------|
| 1 Barrel (Assembly) | 32 Disassembly button pin | 61 Firing pin sleeve | 86 Trigger spring |
| 2 Front barrel sleeve | 33 | 62 Firing pin spring | 87 Trigger spring safety |
| 3 Mounting rail | 34 | 63 Firing pin plug | 88 Trigger spring safety pin |
| 4 Mounting rail screw (4x) | 35 | 64 Pistol grip | 89 Bolt catch/release button pin |
| 5 Flash hider nut | 36 | 65 Interchangeable back strap | 90 Front sight |
| 6 Flash hider washer | | 66 Back strap pin | 91 Rear sight |
| 7 Compensator | 37 | 67 Magazine well | 92 Magazine Release |
| 8 Piston | 38 | 68 Magazine release | 93 Magazine Release strap |
| 9 Piston spring rest | 39 | 69 Magazine release pin (2x) | 94 Mag Release Pin Spring |
| 10 Piston spring | 40 | 70 Magazine release spring | 95 Mag Release Strap Pin |
| 11 Piston buffer | 41 Recoil spring | 71 Bolt release | 96 Mag Release Pin Lock |
| 12 Piston pin (3x) | 42 Buffer | 72 Bolt release guide | 97 Main spring |
| 13 Gas tube | 43 Buffer pin | 73 Washer | 98 Hammer |
| 14 Gas tube pin | 44 Recoil assembly bar | 74 Bolt release spring | 99 Hammer pin |
| 15 Gas tube pin spring | 45 Recoil guide tube (assembly) | 75 Bolt catch/release button | 100 Fire mode selector |
| 16 Gas tube pin | 46 Recoil spring washer | 76 Bolt catch/release button spring | 101 Fire mode selector pin |
| 17 Receiver | 47 Rear guide locking piece | 77 Disassembly pin (2x) | 102 Fire mode selector lever, left |
| 18 Deflector | 48 Front guide locking piece | 78 Disassembly pin spring (2x) | 103 Fire mode selector lever, right |
| 19 Deflector pin | 49 Breech block carrier | 79 Disassembly pin plug (2x) | 104 Magazine |
| 20 Receiver insert, front (2x) | 50 Breech block | 80 Trigger mechanism housing | 105 Mag Release Pin (Assembly) |
| 21 Side cover plate (2x) | 51 Extractor | 81 Trigger | |
| 22 Securing screw (6x) | 52 Extractor spring | 82 Trigger spacer (2x) | |
| 23 Securing screw washer (6x) | 53 Ejector | 83 Disconnecter | |
| 24 Breech block carrier handle | 54 Ejector spring | 84 Ratchet catch spring | |
| 25 Front swivel | 55 Spring element | 85 Trigger pin (2x) | |
| 26 Front swivel screw | 56 Operation pin | | |
| 27 Rear swivel | 57 Firing pin block | | |
| 28 Extractor and ejector pin (2x) | 58 Firing pin block pin | | |
| 29 Rear head | 59 Firing pin block spring | | |
| 30 Disassembly button | 60 Firing pin | | |
| 31 Disassembly button spring | | | |

*If part is not clickable, it is either not available or not sold separately