



CLICK ON PARTS DESCRIPTION TO NAVIGATE TO CORRESPONDING PRODUCT PAGE

LIST OF PARTS

*If part is not clickable, it is either not available or not sold separately.

- | | | |
|---------------------------------|-------------------------------|-----------------------------|
| 1 Barrel | 26 Trigger | 51 Sling Swivel |
| 2 Front Sight | 27 Trigger Rivet | 52 Sling Swivel Screw |
| 3 Front Sight Screw | 28 Trigger Pin | 53 Elastic Spacer |
| 4 Front Sight Cover | 29 Trigger Rod Pin | 54 Trigger Guard |
| 5 Front Sight Base | 30 Trigger Rod | 55 Trigger Guard Plate |
| 6 Front Sight Base Screw | 31 Trigger Rod Nut | 56 - |
| 7 - | 32 Trigger Spring Washer | 57 Rear Stock Screw |
| 8 Rear Sight | 33 Trigger Pull Spring | 58 Magazine Shell |
| 9 Rear Sight Screw (2x) | 34 Bolt Guide | 59 Magazine Follower |
| 10 - | 35 Bolt | 60 Magazine Follower Spring |
| 11 - | 36 Extractor | 61 Magazine Base |
| 12 Magazine Housing Insert | 37 Holder | 62 Magazine Plunger |
| 13 Magazine Housing Insert Pin | 38 Extractor Spring | 63 Magazine Plunger Spring |
| 14 - | 39 Safety | 64 Magazine Shell |
| 15 Receiver | 40 Bolt Handle | 65 Magazine Follower |
| 16 Magazine Housing | 41 Striker | 66 Magazine Follower Spring |
| 17 Magazine Housing Front Screw | 42 Striker Spring | 67 Adapter Body |
| 18 Magazine Housing Rear Screw | 43 Striker Spring Support | 68 Magazine Shell |
| 19 Magazine Catch | 44 Stock | 69 Magazine Follower |
| 20 Magazine Catch Spring | 45 Butt Plate | 70 Magazine Follower Spring |
| 21 Magazine Catch Pin | 46 Butt Plate Screw (2x) | 71 Magazine Base |
| 22 Sear | 47 Front Stock Screw | |
| 23 Sear Steel Ball | 48 Barrel Screw (2x) | |
| 24 Sear Spring | 49 Sling Swivel Assembly (2x) | |
| 25 Sear Pin | 50 Sling Swivel Wood Screw | |