

CLICK ON PART DESCRIPTION TO NAVIGATE TO CORRESPONDING PRODUCT PAGE

- | | | |
|-------------------------------|--|--------------------------|
| 1 Barrel | 29 Bolt Stop Pin | 56 Spring Washer |
| 2 Rear Sight | 30 Pin | 57 Stock |
| 3 Front Sight | 31 Ejector | 58 Butt Plate |
| 4 Front Sight Base | 32 Ejector Spring | 59 Butt Plate Screw |
| 5 Insert | 33 Sear | 60 Swivel Wood Screw |
| 6 Screw | 34 Sear Stop | 61 Sling Swivel |
| 7 Spring Washer | 35 Sear Stop Spring | 62 Swivel Screw |
| 8 Front Sight Detent | 36 Sear Pin | 63 Swivel Washer |
| 9 Detent Spring | 37 Trigger Housing | 64 Sling Swivel Assy |
| 10 Pin, Front Sight Detent | 38 Trigger | 65 Trigger guard |
| 11 Front Sight Cover | 39 Trigger Lever | 66 Magazine Catch |
| 12 Receiver | 40 Trigger Pin | 67 Magazine Catch Spring |
| 13 Bolt | 41 - | 68 Rear Spacer |
| 14 Bolt Handle | 42 Adjusting Screw, Set -Trigger | 69 Frame Screw, Front |
| 15 Extractor | 43 Set-Trigger Lever | 70 Frame Screw, Rear |
| 16 Extractor Collar | 44 Set-Trigger Lever Spring | 71 Magazine Shell |
| 17 Firing Pin | 45 Pin | 72 Follower |
| 18 Firing Pin Spring | 46 Retaining Ring (2x) | 73 Magazine Spring |
| 19 Firing Pin Spring Retainer | 47 Adjusting Screw (B) | 74 Magazine Base Lock |
| 20 Bolt Handle Catch | 48 Spring, Trigger Pull | 75 Magazine Floor Base |
| 21 Bolt Sleeve | 49 Adjusting Screw, Trigger Pull (A) | 76 Fore End Band |
| 22 Pin, Firing Pin | 50 Locking Nut | 77 Fore End Band Screw |
| 23 Safety | 51 Adjusting Screw, Trigger Overtravel (C) | 78 Fore End Nut |
| 24 Safety Spring | 52 Locking Nut | 79 Trigger Spring |
| 25 Bolt Handle Catch Plate | 53 Nylon Pin (2x) | |
| 26 Bolt Handle Catch Post | 54 Trigger Mechanism | |
| 27 Bolt Stop | 55 Screw | |
| 28 Bolt Stop Spring | | |

*If part is not clickable, it is either not available or not sold separately.

ILLUSTRATION AND LIST OF PARTS

