

- | | | | |
|-------------------------------|---------------------------------|--|-------------------------------------|
| 1 Barrel | 31 Safety | 60 Adjusting Screw, Trigger Pull (A) | 88 Frame Screw, Front |
| 2 Rear Sight | 32 Safety Pawl (A) | 61 Locking Nut | 89 Rear Spacer |
| 3 Front Sight | 33 Safety Pawl Spring (A) | 62 Adjusting Screw, Trigger Overtravel (C) | 90 Frame Screw, Rear |
| 4 Front Sight Base | 34 Roller | 63 Locking Nut | 91 Trigger Guard - Magazine Version |
| 5 Front Sight Base Screw 05 | 35 Safety Pawl Pin | 64 Nylon Pin (2x) | 92 Magazine Latch |
| 6 Front Sight Base Screw 03 | 36 Sear | 65 Trigger Mechanism | 93 Magazine Latch Spring |
| 7 Rear Sight Base Screw | 37 Sear Stop | 66 Screw | 94 Magazine Latch Pin |
| 8 Front Sight Detent | 38 Sear Spring | 67 Spring Washer | 95 Magazine Catch |
| 9 Detent Spring | 39 Sear Pin | 68 Stock | 96 Magazine Catch Spring |
| 10 Pin, Front Sight Detent | 40 Bolt Stop | 69 Butt Plate Spacer | 97 Magazine Catch Pin |
| 11 Front Sight Cover | 41 Bolt Stop Spring | 70 Butt Plate | 98 Magazine Shell |
| 12 Receiver | 42 Safety Pin | 71 Screw, Butt Plate | 99 Magazine Floor Plate |
| 13 Bolt | 43 Retaining Plate | 72 Butt Plate Plug | 100 Floor Plate Lock |
| 14 Bolt Handle Knob | 44 Ejector | 73 Swivel Wood Screw | 101 Magazine Spring |
| 15 Extractor | 45 Ejector Pin | 74 Sling Swivel | 102 Follower |
| 16 Extractor Collar | 46 Ejector Spring | 75 Swivel Screw | 103 Magazine Ejector |
| 17 Firing Pin | 47 Ball | 76 Swivel Screw Washer | 104 Magazine Ejector Spring |
| 18 Firing Pin Spring | 48 Trigger Housing | 77 Swivel Assembly | 105 Magazine Ejector Pin |
| 19 Support, Firing Pin Spring | 49 Trigger | 78 Trigger Guard - Box Version | 106 Trigger Spring |
| 20 Nut, Firing Pin Spring | 50 Trigger Lever | 79 Box Shell | 107 Safety Pawl (B) |
| 21 Cocking Piece | 51 Trigger Lever Pin | 80 Floor Plate | 108 Safety Pawl Spring (B) |
| 22 Pin, Firing Pin Nut | 52 - | 81 Floor Plate Pin | 109 Safety Pawl Pin |
| 23 Cap | 53 Adjusting Screw, Set Trigger | 82 Floor Plate Latch | 110 Bolt Pawl |
| 24 Bolt Sleeve | 54 Set Trigger Lever | 83 Spring, Floor Plate Latch | 111 Bolt Pawl Spring |
| 25 Disassy Catch | 55 Spring, Set Trigger Lever | 84 Pin, Floor Plate Latch | 112 Bolt Pawl Pin |
| 26 Disassy Catch Spring | 56 Pin | 85 Magazine Box Spring | 113 Extractor Pin |
| 27 Disassy Catch Pin | 57 Retaining Ring | 86 Magazine Follower | 114 Extractor Pin Spring |
| 28 Disassy Catch Plunger | 58 Adjusting Screw (B) | 87 Front Spacer | 115 Magazine Floor Plate Insert |
| 29 Plunger Spring | 59 Spring, Trigger Pull | | |
| 30 Plunger Pin | | | |

*If part is not clickable, it is either not available or not sold separately.

