


CLICK ON PART DESCRIPTION TO NAVIGATE TO CORRESPONDING PRODUCT PAGE

LIST OF PARTS

- | | |
|-----------------------------------|-------------------------------|
| 1 Slide | 29 Sear |
| 2 Front Sight | 30 Sear Spring |
| 3 Front Sight Pin | 31 Main Spring Strut |
| 4 Rear Sight | 32 Main Spring |
| 5 Extractor | 33 Main Spring Plug |
| 6 Pin (3x) | 34 Safety |
| 7 Extractor Spring | 35 Safety Latch |
| 8 Firing Pin | 36 Safety Latch Spring |
| 9 Firing Pin Spring | 37 Safety Pin |
| 10 Firing Pin Stop | 38 Trigger Guard |
| 11 Frame | 39 Pin |
| 12 Barrel | 40 Trigger Guard Pin |
| 13 Recoil Spring | 41 Slide Stop |
| 14 Trigger | 42 Slide Stop Spring |
| 15 Trigger Spring | 43 Magazine Catch Push Button |
| 16 Pin (2x) | 44 Magazine Catch |
| 17 Trigger Bar | 45 Magazine Catch Spring |
| 18 Trigger Bar Pin | 46 Magazine Catch Lever |
| 19 Disconnecter | 47 Magazine Catch Lever Pin |
| 20 Ejector | 48 Left Grip Panel |
| 21 Automatic Safety | 49 Right Grip Panel |
| 22 Steel Ball | 50 Grip Panel Screw (2x) |
| 23 Pin (2x) | 51 Grip Panel Insert (2x) |
| 24 Trigger Bar Disconnecter | 52 Magazine Body |
| 25 Trigger Bar Disconnecter Rivet | 53 Magazine Base |
| 26 Hammer | 54 Magazine Base Lock |
| 27 Hammer Pin | 55 Magazine Spring |
| 28 Hammer Lever | 56 Magazine Follower |

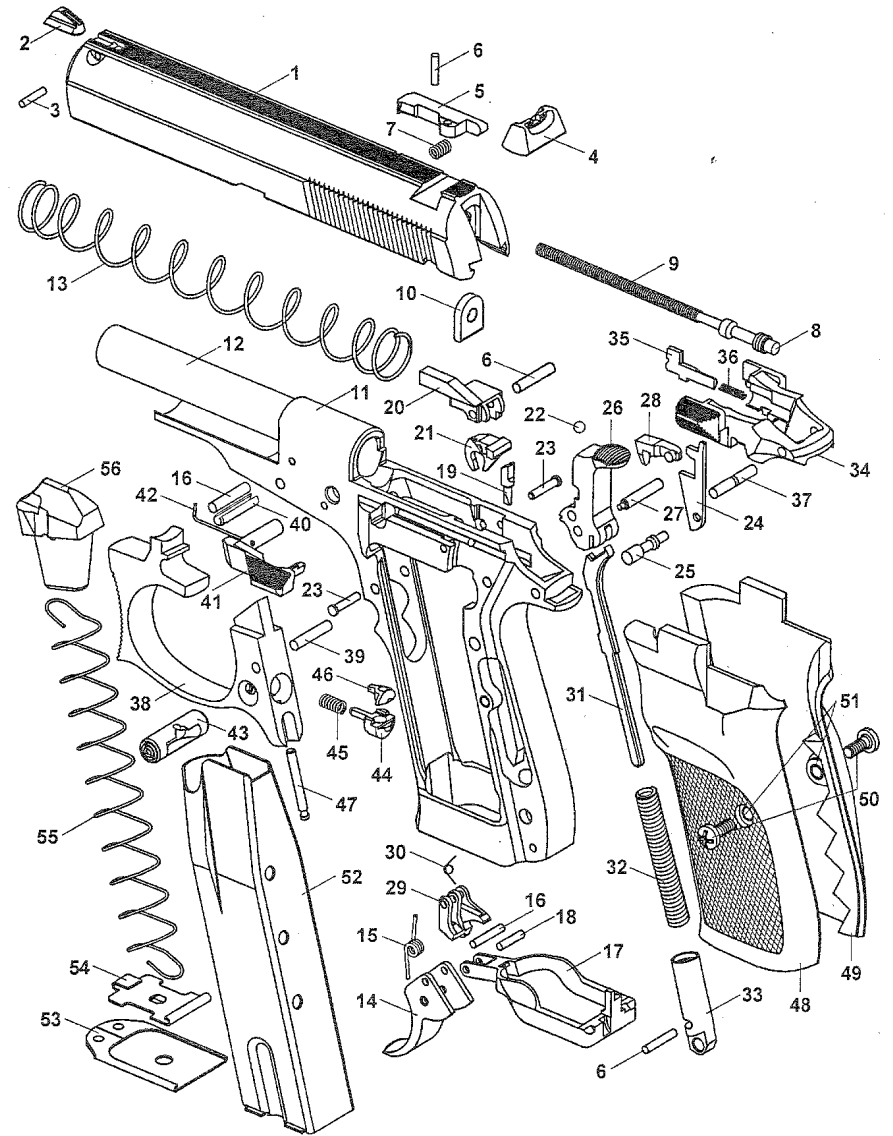

*If part is not clickable, it is either not available or not sold separately.