

CLICK ON PARTS DESCRIPTION TO NAVIGATE TO CORRESPONDING PRODUCT PAGE

LIST OF PARTS

- | | |
|--|------------------------------------|
| 1 Frame | 25 Front Sight |
| 2 Slide | 26 Main Spring Strut |
| 3 Barrel | 27 Main Spring Plug |
| 4 Slide Stop | 28 Sear Pin |
| 5 Magazine | 29 Hammer Pin |
| 6 Insert - Front | 30 Trigger Pin |
| 7 Insert - Rear | 31 Magazine Catch Plug |
| 8 Trigger | 32 Main Spring Plug Pin |
| 9 Trigger Bar | 33 Ejector Pin |
| 10 Sear | 34 Magazine Catch Pin |
| 11 Hammer | 35 Spring Pin |
| 12 Disconnecter | 36 Pin |
| 13 Firing Pin Block Lever | 37 Firing Pin Plug |
| 14 Trigger Bar Disconnecter | 38 Recoil Spring Guide |
| 15 Ejector | 39 Recoil Spring |
| 16 Firing Pin | 40 Extractor Spring |
| 17 Extractor | 41 Firing Pin Spring |
| 18 Firing Pin Block Stop | 42 Firing Pin Block Stop Spring |
| 19 Magazine Catch | 43 Spring (2x) |
| 20 Safety - Left * | 44 Slide Stop Spring Pin |
| 21 Safety - Right * | 45 Main Spring |
| 22 Hammer Decocking Lever Controller - Left * | 46 Trigger Spring |
| 23 Hammer Decocking Lever Controller - Right * | 47 Slide Stop Spring |
| 24 Rear Sight | 48 Hammer Decocking Lever Spring * |
| | 49 Trigger Bar Spring |
| | 50 Sear Spring |

*If part is not clickable, it is either not available or not sold separately.

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.

