

CLICK ON PARTS DESCRIPTION TO NAVIGATE TO CORRESPONDING PRODUCT PAGE

LIST OF PARTS

- |  |                                    |
|--|------------------------------------|
| 1 Frame  | 25 Front Sight                     |
| 2 Slide  | 26 Main Spring Strut               |
| 3 Barrel                                       | 27 Main Spring Plug                |
| 4 Slide Stop                                   | 28 Sear Pin                        |
| 5 Magazine                                     | 29 Hammer Pin                      |
| 6 Insert - Front                               | 30 Trigger Pin                     |
| 7 Insert - Rear                                | 31 Magazine Catch Plug             |
| 8 Trigger                                      | 32 Main Spring Plug Pin            |
| 9 Trigger Bar                                  | 33 Ejector Pin                     |
| 10 Sear  | 34 Magazine Catch Pin              |
| 11 Hammer                                      | 35 Spring Pin                      |
| 12 Disconnecter                                | 36 Pin                             |
| 13 Firing Pin Block Lever                      | 37 Firing Pin Plug                 |
| 14 Trigger Bar Disconnecter                    | 38 Recoil Spring Guide             |
| 15 Ejector                                     | 39 Recoil Spring                   |
| 16 Firing Pin                                  | 40 Extractor Spring                |
| 17 Extractor                                   | 41 Firing Pin Spring               |
| 18 Firing Pin Block Stop                       | 42 Firing Pin Block Stop Spring    |
| 19 Magazine Catch                              | 43 Spring (2x)                     |
| 20 Safety - Left *                             | 44 Slide Stop Spring Pin           |
| 21 Safety - Right *                            | 45 Main Spring                     |
| 22 Hammer Decocking Lever Controller - Left *  | 46 Trigger Spring                  |
| 23 Hammer Decocking Lever Controller - Right * | 47 Slide Stop Spring               |
| 24 Rear Sight                                  | 48 Hammer Decocking Lever Spring * |
|  | 49 Trigger Bar Spring              |
|  | 50 Sear Spring                     |

\*If part is not clickable, it is either not available or not sold separately.

The parts marked \* differ according to versions, or as case may be in some versions are entirely missing.

